

Mounting the servos to the rudder and elevator. Install the pull-pull cables as shown in fig(2-8).









Install the control homs and Mounting the tail surfaces(9-17).






















21

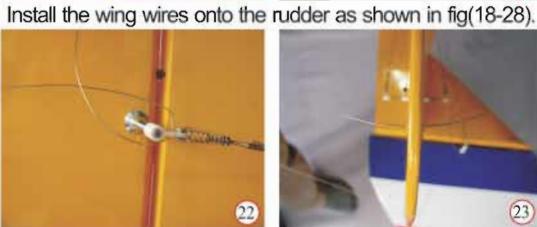



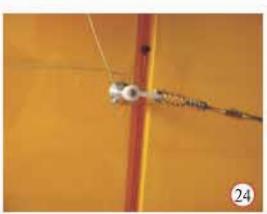



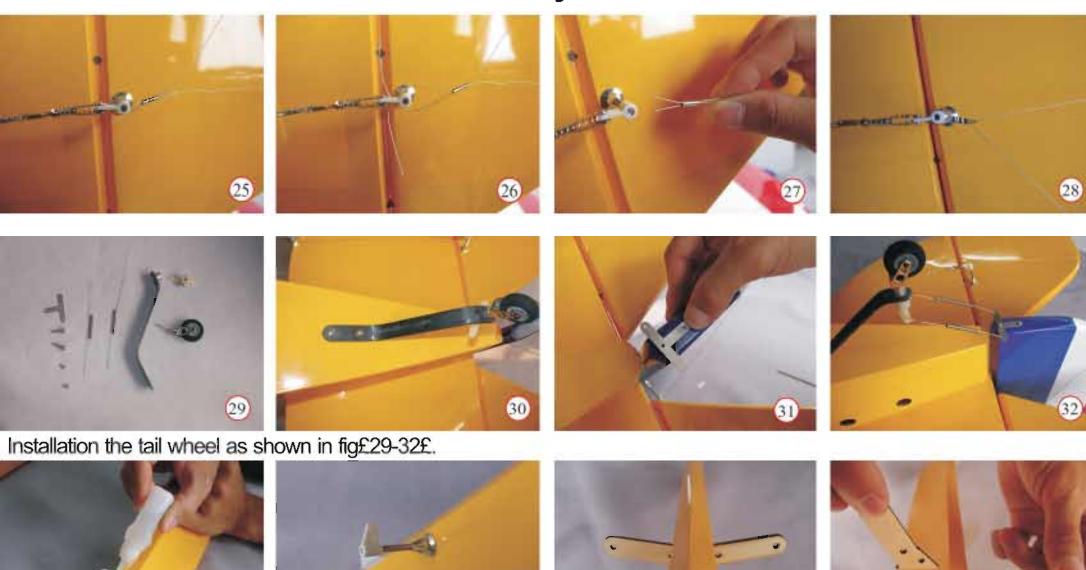

Mounting the aileron rudder as shown in fig£33-34£.

33

35


























to wing as shown in fig£43-45£.

Mounting the safety tube as show in fig(46-47).



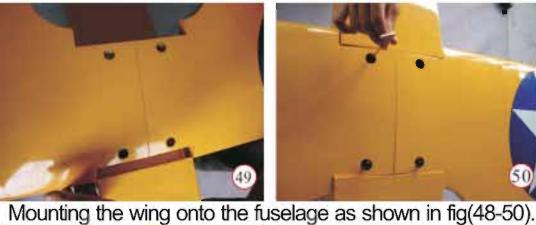














Installation of the main Landing gear as shown in fig(51-54).

Mounting the main landing gear onto the



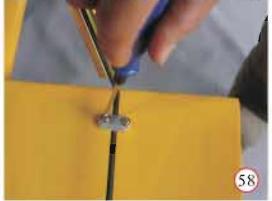





fuselage as shown in fig(55-58).

Mounting the windshield as show in fig(59-60).

 


























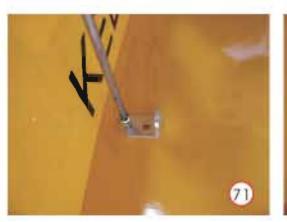





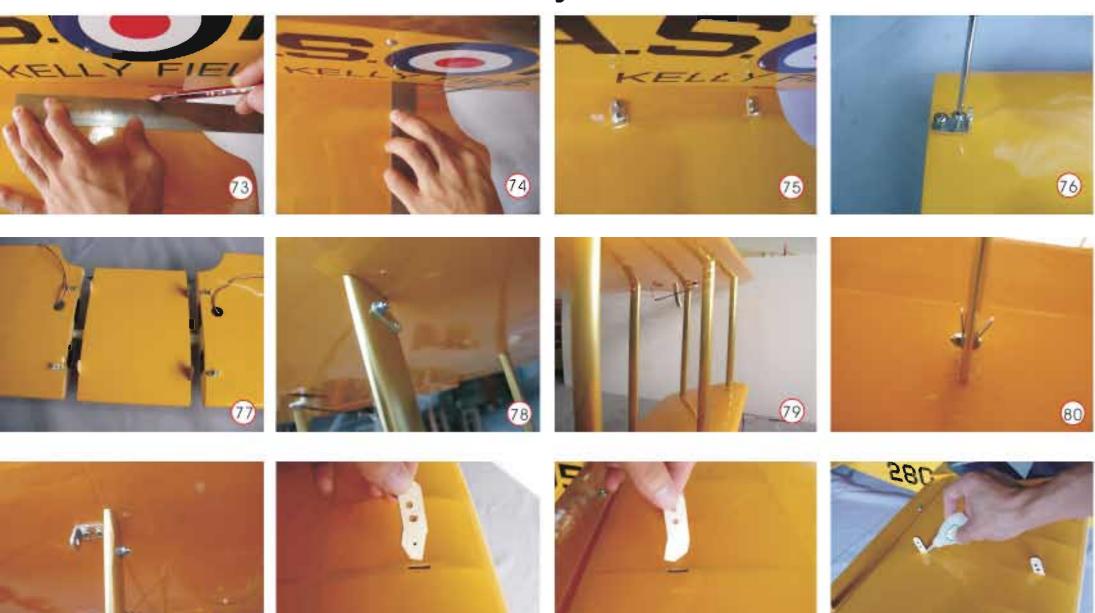

Mounting the struts onto the top wing as shown in fig(82-86).

83











C.G: The C.G position should be 140mm from the leading edge of the upper wing.

Install the engine and engine cowl as shown in fig(98-102).